





Impact Safety Partition - Caddy Cargo

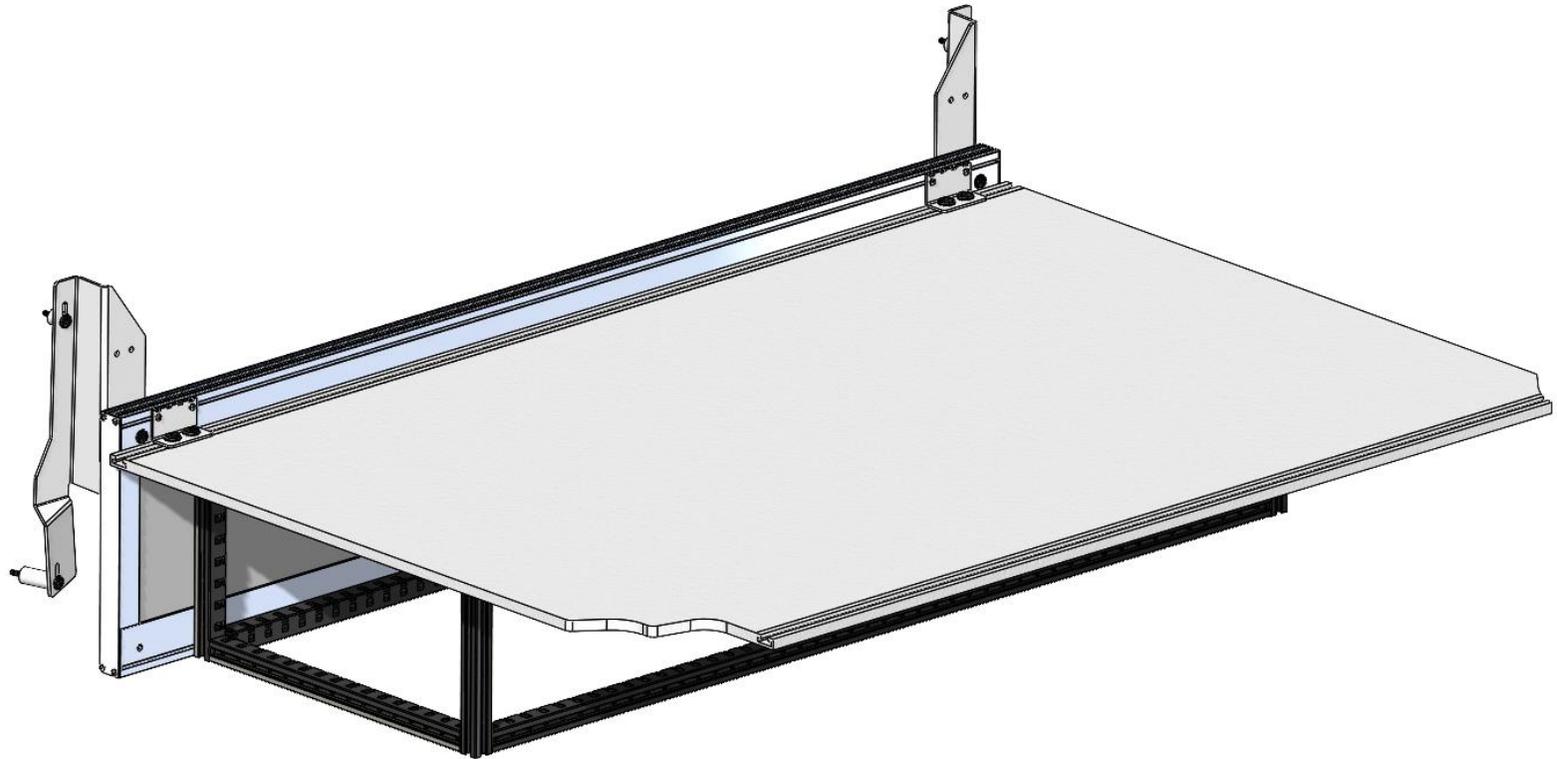

Complete installation



Impact Safety Partition - Caddy Cargo

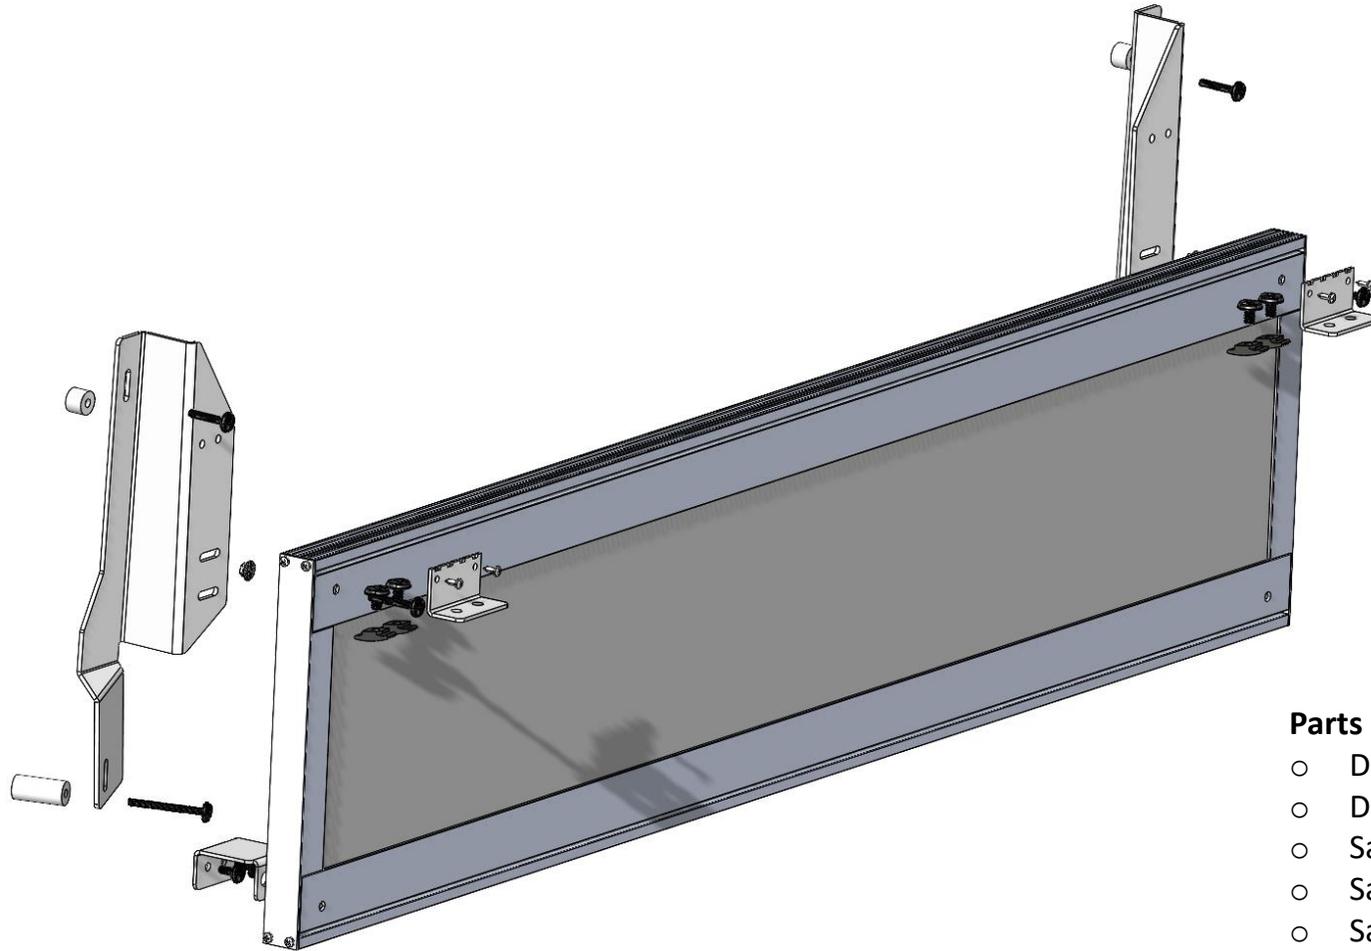



Parts in 28100-04

○ Distance 43 mm	2
○ Distance 15 mm	2
○ Safety screw M6x16	4
○ Safety screw M6x35	2
○ Safety screw M6x45	2
○ Safety nu M6	8
○ Safety screw M8x12	4
○ T Track nut 12x35x8	4
○ Screw RXS 4,2x13	4




Impact Safety Partition - Caddy Cargo


Assembly in first and second hole in the B-beam on both sides.

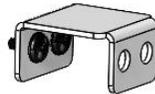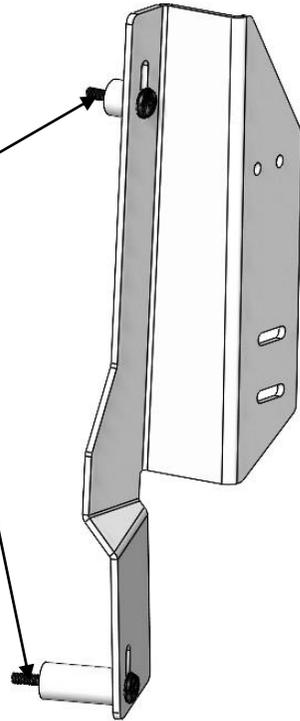

Use the fixation for the lashing eyelet for the lower bracket on both sides

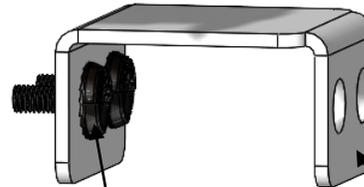


After assembly the M6 fixation apply glue on this surface to fix wall

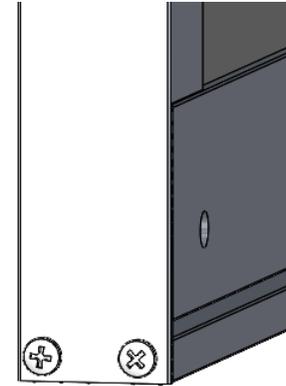




Impact Safety Partition - Caddy Cargo


Possible to fix the lashing
eyelet in these fixation
hole.

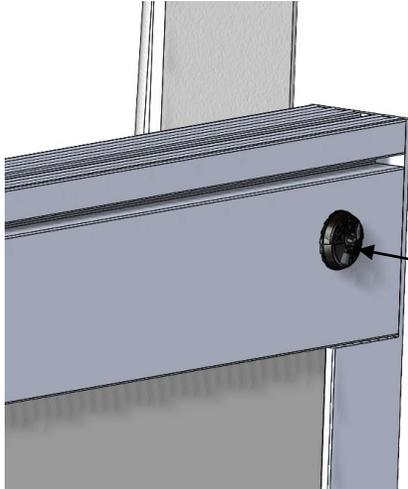








Fixate the Impact Safety
partition with M6x45
and M6 nut.

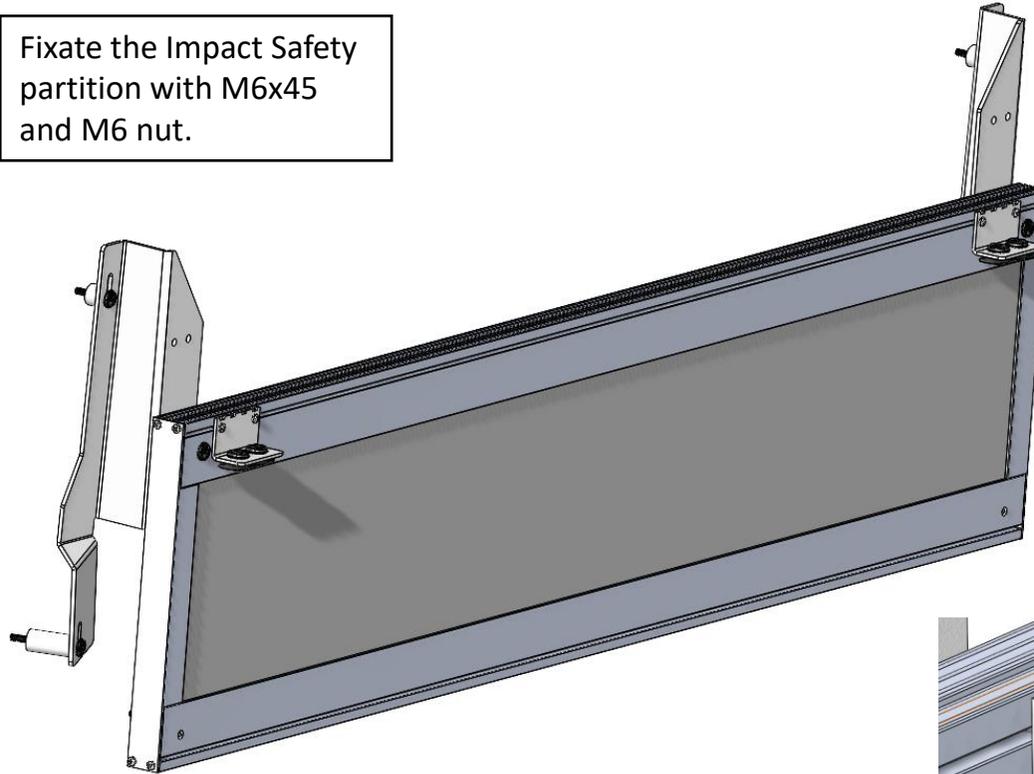

Fixate the modul floor with
bracket and M8x12 with t-
track nut. Assembly also
RXS screw in the aluminium
profile



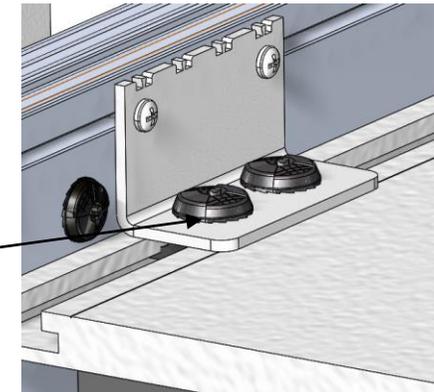


Objekt

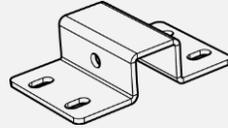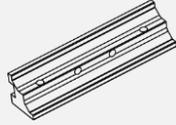

Misc

99 x M8

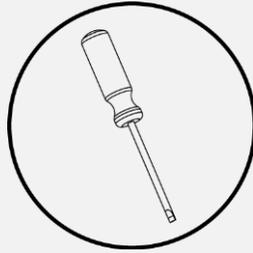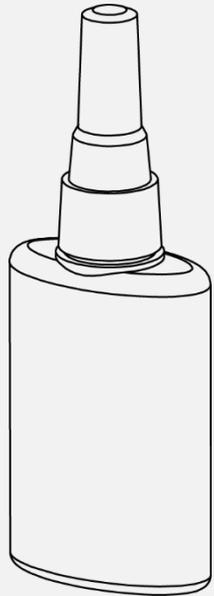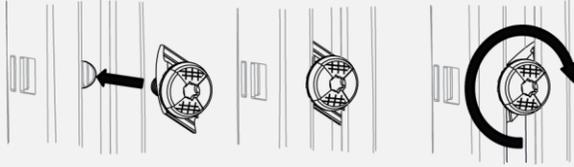

VHB cleaner

