



Mobil Office








Mobil-Office with all parts.





Parts included in screw kit.



Start by finding the correct position for the bracket. Use the M6 bolt/nut and tighten (10Nm).

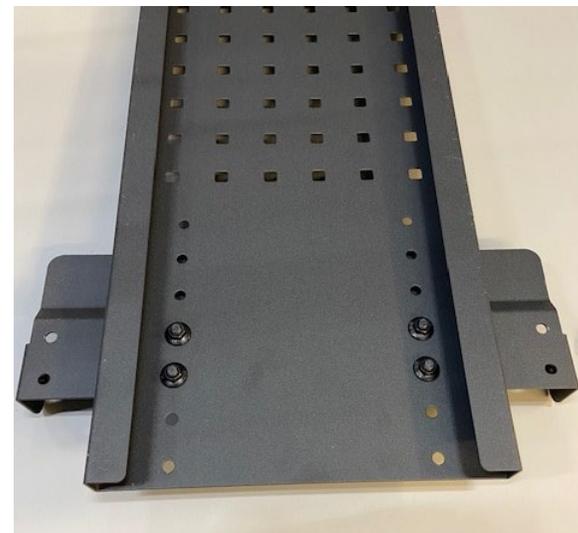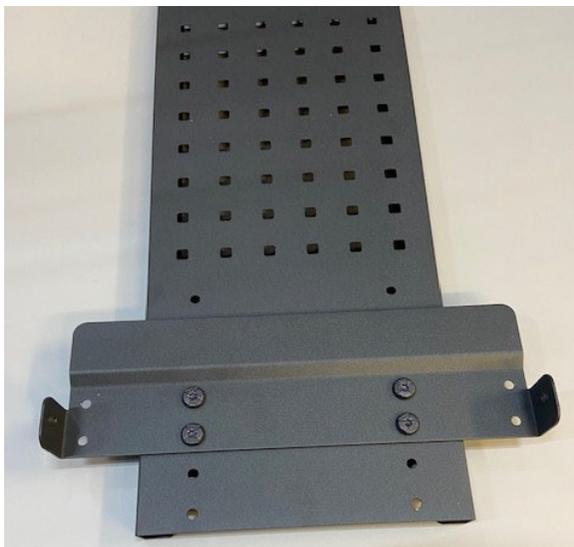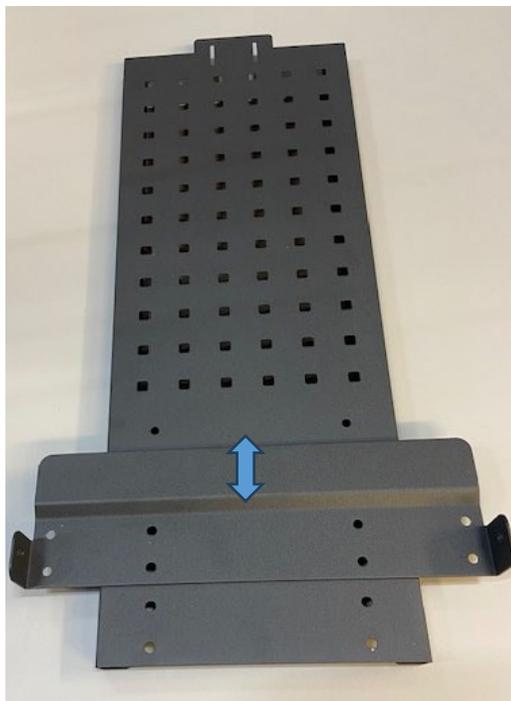

Find a suitable position for the form folder. Use the enclosed screws (x2) and plastic nut (x2) to install it to the rear panel.

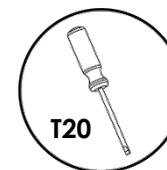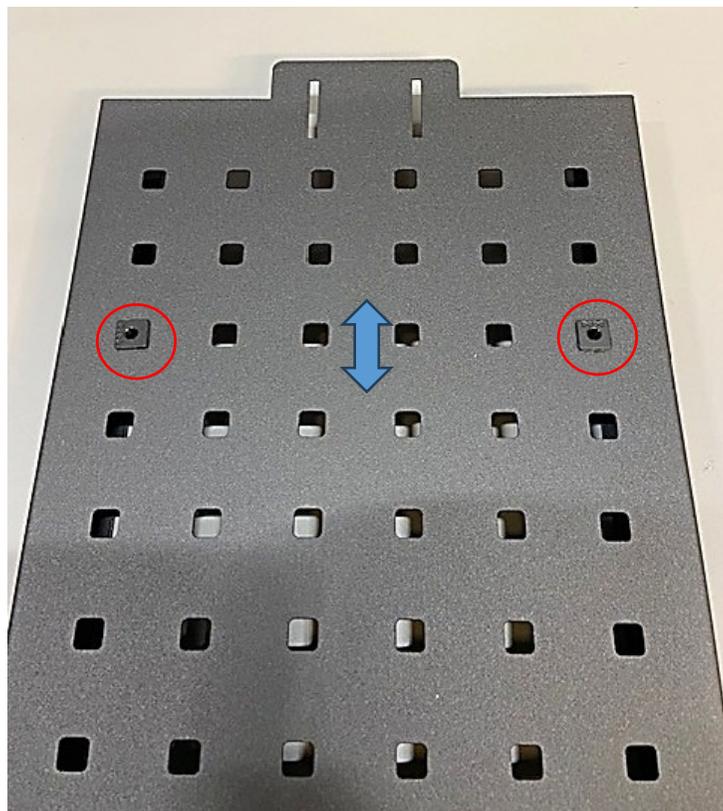

Use the lobe knobs (x2) to connect the tool board to the plastic box.

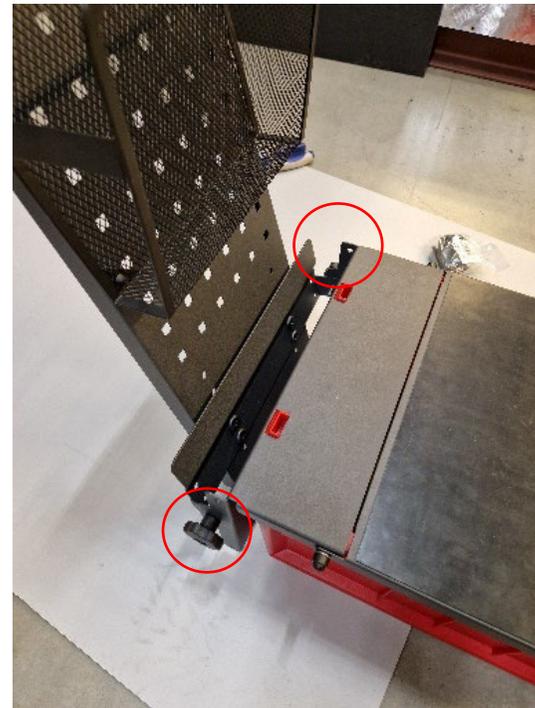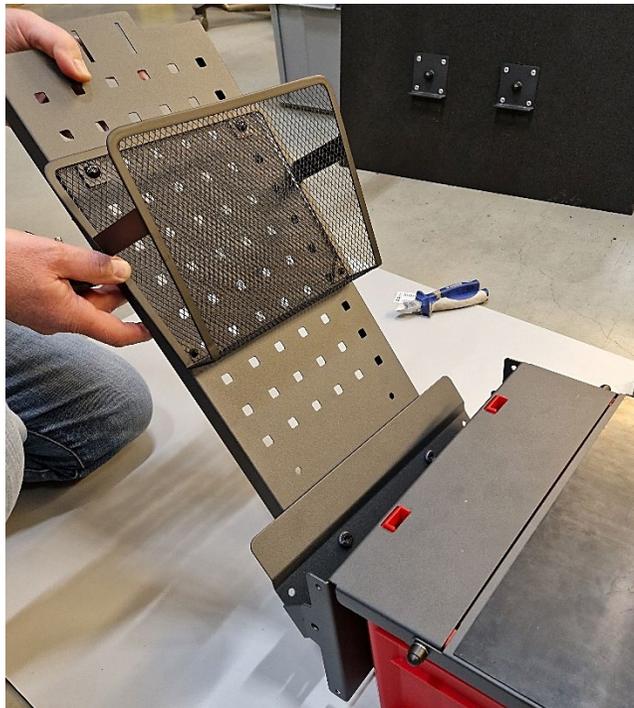

Use the safety belt to fasten the Mobil Office as shown in the pictures below.



Use the lashing strap to tighten the rear support to the headrest.

