




1

Remove original lining using a plastic pry bar for the clips.



*NOTE! Instructions show the upper left item, but the same procedure applies for all items.*

Position the lining and use a white marker to mark the positions of the screws.

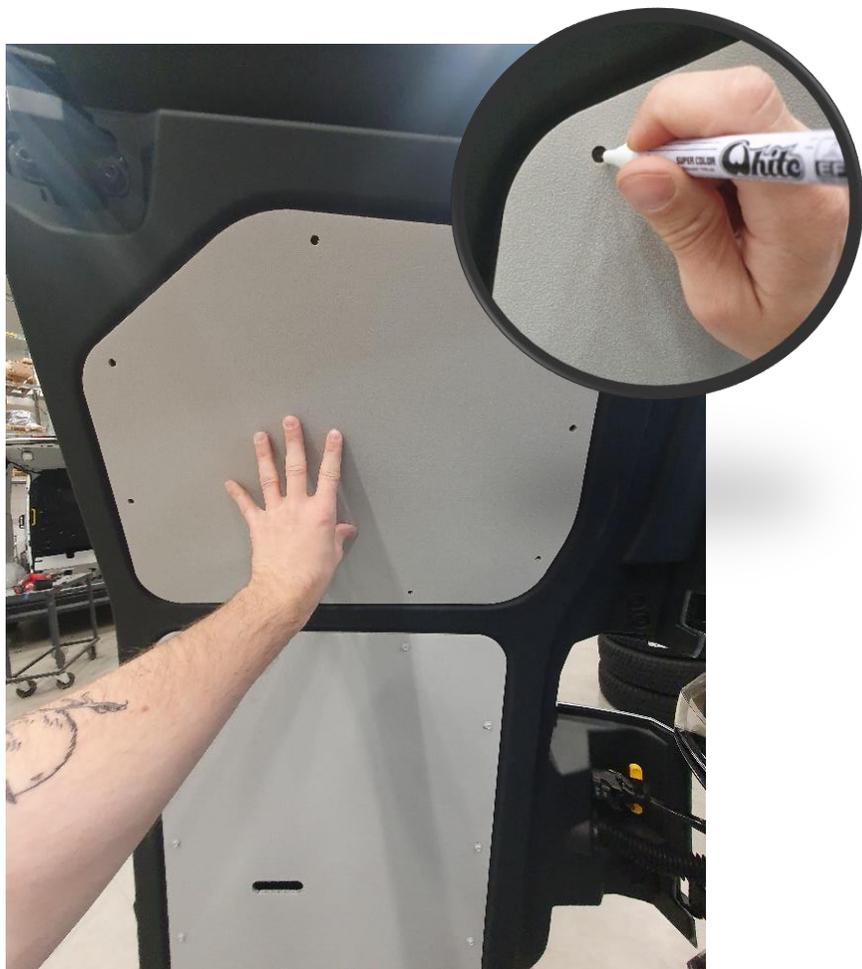

Verify that the holes will not come in conflict with the existing holes.




Screw with caution using the grey lining screw (p/n 36675-03 / 36677-03).  
Please note that the screws are ordered separately.

Be mindful not to strip the threads created in the plastic!



36675-03 / 36677-03

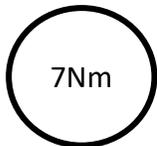

7Nm



End result with the doors closed.

